

**READ & SAVE THESE INSTRUCTIONS**  
**INSTALLATION & OPERATION**  
 INSTRUCTIONS FOR: **FCSL606G**

**CAUTION:** Before connecting the fixture to power supply, be sure that the power is switched off.



Headquarters  
 t 800 900 1730  
 f 630 889 8106  
 775 W. Belden Ave.  
 Addison, IL 60101 USA  
[www.fcighting.com](http://www.fcighting.com)



**FCSL606G Steplight**

1. Remove the faceplate/glass.
2. Remove the reflector/electrical assembly from inside housing.
3. For concrete pour construction: fixture must be installed so the front edge of PVC exterior housing is flush with finished wall.(fig. 1) Please note that threaded inserts are positioned top and bottom to ensure proper faceplate orientation. (fig. 2)
4. Fixture supplied with 2 - .875 holes for through wiring. (fig. 3)
5. Make power supply connections. Fixture must be grounded.
6. Plug all holes not to be used. Replace reflector/electrical assembly in housing.
7. Fasten housing to exterior PVC housing with screws provided.
8. Replace faceplate and lens assembly.

**GENERAL**

1. Before starting the installation, disconnect the power by turning of the circuit breaker or by removing the fuse at the fuse box. Turning the power off at the light switch is not sufficient to prevent electrical shock.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the national electrical code.

**Note:** The important safeguards and instructions appearing in this sheet are not meant to cover all possible conditions and situations that may occur.

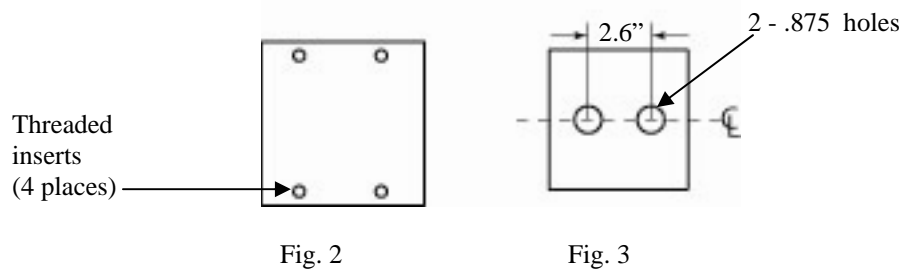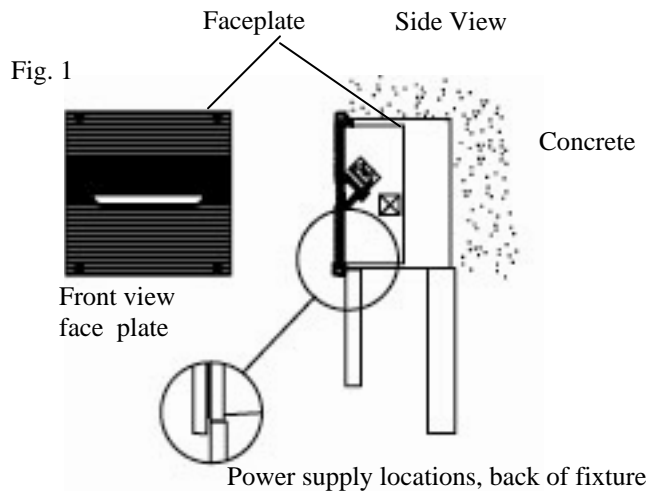

**Confidential**

This document is the proprietary property of FC Lighting, Inc. Any unauthorized transfer, use, or reproduction is strictly prohibited.

©2004 -2007, FC Lighting, Inc.