## FCWS7168 - FCWS7171 - INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE FIXTURE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.

**NOTE**: Includes models; WS7168, WS7170, WS7171

DETAILED ILLUSTRATION



## GENERAL:

- 1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
- 2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
- 3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
- 4. These fixtures are intended to be mounted to a J-Box directly supported by the building structure.

**NOTE**: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

## INSTALLATION

- 1. Loosen hex head screws at the top and bottom of the fixture to remove decorative Faceplate, Lens and Gasket. Remove lamp components to expose Center Nipple on Mounting Plate and carefully set components aside.
- Make power supply conncections. Pass wiring from fixture through Center Nipple on Mounting Plate to make code approved wiring connections at J-Box.
- 3. Before attaching the fixture to the wall, the installer MUST apply a bead of silicone caulk betweem the back of the Mounting Plate and the intended Mounting Surface.
- 4. Fasten Mounting Plate to J-Box using proper J-Box screws.

**NOTE**: Ensure that Fixture is level before finally tightening. You may use additional anchors to secure Fixture Housing to mounting surface.

- 5. Replace lamp components into Housing. If not LED, install correct lamp per label.
- 6. Replace Gasket, Lens & Faceplate, tightening screws at top and bottom of fixture.
- 7. Restore power and test fixture. If fixture does not turn on, disconnect power before checking for problems.

