

READ & SAVE THESE INSTRUCTIONS
INSTALLATION & OPERATION
INSTRUCTIONS FOR: **FCW1033-37**

CAUTION: Before connecting the fixture to power supply, be sure that the power is switched off.



Headquarters
t 800 900 1730
f 630 889 8106
775 W. Belden Ave.
Addison, IL 60101 USA
www.fclighting.com

Instructions:

1. Remove the mounting plate by removing the two screws. Set aside.
2. Level the mounting plate using bubble level, once fixture is in desired position.
3. Attach mounting plate to recess outlet box.
4. Make power supply connections and push into outlet box.
6. Care should be taken when mounting fixture not to pinch power supply wires. Align fixture push up against mounting plate.
7. Secure fixture by tightening the set screws on the mounting plate.
8. For wet locations, caulk between rear gasket and mounting surface to prevent water from entering fixture from behind.
9. Install lamp of proper wattage per fixture label.

CAUTION: Downward light is correct position. Upward light is incorrect position. This fixture must be mounted in the correct position, otherwise it will cause unit failure.

NOTE: FCW10 Up-down fixture, the smaller open frame is the upward lighting, the larger open frame is for downward lighting. **Never install fixture in opposite position.**

GENERAL

1. Before starting the installation, disconnect the power by turning of the circuit breaker or by removing the fuse at the fuse box. Turning the power off at the light switch is not sufficient to prevent electrical shock.
2. To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
3. All electrical connections must be in accordance with local codes, ordinances, or the national electrical code.
4. These fixtures are intended to be mounted to a 4" x 2-1/8" deep metal octagon outlet box. The box must be directly supported by the building structure.


Note: The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

Set ballast voltage – see the ballast wiring label and the rating label to locate the power tap to the appropriate voltage tap. If supplied with single voltage tap, make sure the power voltage furnished is the same as the fixture.


CAUTION: Make sure all unused ballast taps are capped to avoid a short circuit to any part of the fixture.



FCW1033-35

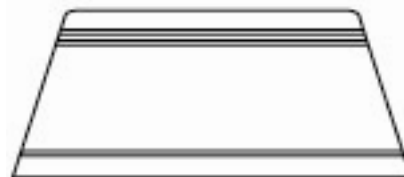

FCW1036

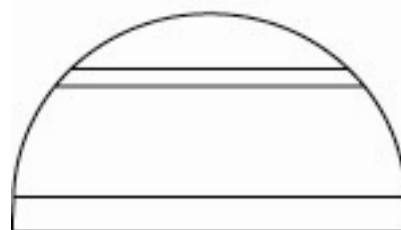

FCW1037

Confidential

This document is the proprietary property of FC Lighting, Inc. Any unauthorized transfer, use, or reproduction is strictly prohibited.

©2003-2007, FC Lighting, Inc.