## FCW3800, 13-INCH ROUND, LOW-PROFILE — INSTALLATION INSTRUCTIONS

CAUTION: BEFORE CONNECTING THE LUMINAIRE TO A POWER SUPPLY, MAKE SURE THE POWER IS SWITCHED OFF.



www.paramountlighting.com 3609 Swenson Ave. St. Charles, IL 60174

## GENERAL:


- 1. Before starting the installation, make sure all electricity has been turned off and electrical breaker has been locked out and tagged out.
- To ensure the success of the installation, be sure to read these instructions and review the diagrams thoroughly before beginning.
- 3. All electrical connections must be in accordance with local codes, ordinances, or the National Electrical Code.
- 4. These luminaires are intended to be mounted directly to the building structure, over the electrical junction box or conduit outing.
- 5. All luminaires to be installed by a qualified electrician.

**NOTE:** The important safeguards and instructions appearing in this manual are not meant to cover all possible conditions and situations that may occur.

## INSTALLATION:


- 1. Remove Back Cover by loosening (4) Set Screws and mount to J-Box or Surface with Mounting Screws (third-party hardware).
- 2. Connect ground, power, and dimming wires to source with wire nuts (third-party hardware).
- 3. Secure Front Cover by tightening (4) Set Screws.
- Installer MUST add a bead of silicone caulk where edges of luminaire meets the mounting surface top and sides to avoid water seepage (not bottom).


**WARNING:** Failure to properly seal luminaire to surface may compromise the IP66 rating and void the luminaire warranty.

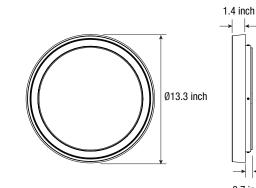

FRONT VIEW

**DETAILED ILLUSTRATION** 

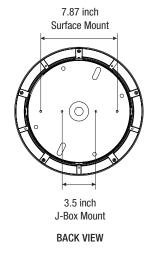

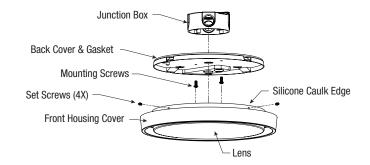

0.7 inch

SIDE VIEW